

How to Frame a Poppy

Materials used

Moulding 314240/314250	Tapestry Tape 999 000 030
Framebox 207 400 000	Flexible Multipoints
Suedette Mountboard SSS 008 521	D-Rings 999 000 078
Glass Clarity CLA 080 110	Small Screws
Hardboard 999 000 045	Block of wood 48mm x 44mm in Thickness
Framers Points 999 000 084	Gummed Brown Tape 999 000 067

Method


- Measure the size of the Poppy.
- Distinguish how far down you want the depth from the top and the bottom of the frame from the mount (5cm) to the poppy.
- Cut the mount to size, we have cut a 5cm mount.
- Cut the frame to the size of the mount.
- Measure the depth of the poppy (they all vary) to make the box frame.
- Build your box frame up to the depth of the poppy using Framebox 207 400 000, allowing for glass, mount, backing mount and hardboard.
- Cut the mount board for your poppy to fit the inside measurement of your box frame, we used Suedette SSS 008 521.
- Cut the glass to size and fit this into the frame along with the mount and use Framers points to hold into place.
- Fit the box frame to your frame using Flexible Multipoints.

To Support the Poppy

- We used a block of wood(support block) and cut to the width of the inside measurement of the frame.
- Find the centre of the width of the support block then measure 20mm in from the bottom of the 68mm thickness of the wood and mark.
- Drill a 5mm hole at this point.

LARSON · JUHL®

- Put the wooden block into the base of the frame, level with the rebate of the box frame, fixing it with 2 screws through the outside of the box frame.
- Once the block is in place, cut Suedette strips to cover the inside of the box frame and the wooden block.

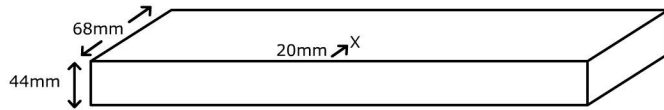

- Use Tapestry Tape – 999 000 030 to fix the strips into place.
- Take the block back out of the frame and find the hole that was drilled into the block. Place the stem of the poppy into the hole, through the Suedette covering.
- Assemble the poppy onto the stem.
- Place the block/poppy into the frame and refix the block into place.
- Cut Hardboard to the box frame rebate size – 999 000 045.
- Use 2 D-rings and fix with rivets on to the hardboard for hangers.
- Use Tapestry Tape – 999 000 030 to fix the Suedette backing onto the Hardboard.
- Fix the Hardboard into the Framebox rebate using small screws.
- Use Gummed Brown Tape – 999 000 067 to cover the outer sides of the box frame.
- For extra security, you can put 2 screws through the back of the hardboard, into the wooden block.

LARSON · JUHL®

